



How to use the system – Panel

Status indicator

Touch panel

Keypad KP-102 (option)

- Log in/log out
- Voice guide
- Return to home screen
- Display help
- Enlarge display*
- Enter a value or a number
- Clear a value
- Reset the settings
- Stop a process
- Start a process

Power indicator

Energy Safe Mode on/off

*with Classic Style

Operating the touch screen*

Screen gestures

- Tap** to select or determine a menu
- Flick** to scroll a list or a page
- Drag** to move a scroll bar or document.
- Pan** to move a displayed image.

Displaying the keypad

Tap the numerals or the input area to display the keypad.
(If the system is equipped with the optional hardware keypad KP-102, it can be used instead.)

Moving the keypad

Touch the upper side of the keypad and drag it to another display position.

*Available touch functions vary depending on displayed screen.

Touch screen – Home

 
- login/logout
- Display active or standby jobs
- Check warnings or notices
- Check device information
- Shortcut key area*
- Page indicator
- User ID
- Configure settings/display use status
- Change display language (temporarily)

*Available shortcut keys depend on machine configuration.



Basic copy functions – Make a copy


1. Position the original(s).

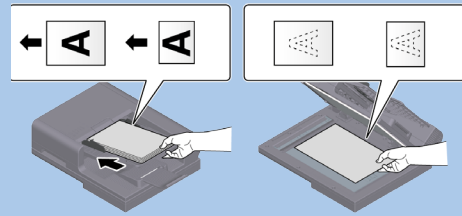


2. Tap **Copy** on the home screen.



 3. Set copy options as needed.
4. Enter the number of copies.

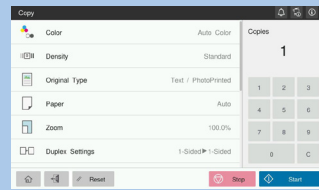

 5. Tap **Start**.

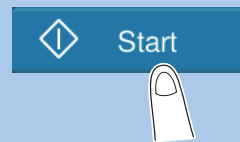

Copy operations – Basic copy screen

Setting*	Description
Color	Select the copy color mode (e.g. Full Color, Black & White)
Density	Adjust the brightness of the copy
Original Type	Select the image quality level of the original
Paper	Select paper size and type of the original / change size and type of the paper loaded in paper trays
Zoom	Specify enlargement or reduction ratio
Duplex Settings	Specify 1-sided or 2-sided scanning / copying
Combine	Copy multiple pages on a single sheet
Mixed Original	Scan originals of different sizes
Original Size	Specify the size of the original when it is not detected correctly
Original Direction	Select orientation of the original loaded into ADF or placed on the original glass
Separate Scan	Scan a large number of originals in several batches / scan originals using both ADF and original glass

Annotations for the Copy settings screen:

- Specify copy settings:** Points to the list of settings (Color, Density, Original Type, Paper, Zoom, Duplex Settings).
- Return to home screen:** Points to the Home icon.
- login/logout:** Points to the user icon.
- Reset:** Points to the Reset button.
- Stop:** Points to the Stop button.
- Start:** Points to the Start button.
- Scroll bar:** Points to the vertical scroll bar on the right.
- Number of copy sets:** Points to the 'Copies' field showing '1'.
- Enter number of copy sets:** Points to the numeric keypad.
- Start a copy job:** Points to the Start button.
- Stop a copy job:** Points to the Stop button.
- Return settings to default:** Points to the Reset button.

*Available functions depend on system configuration.

Zoom

1. Position the original(s).
2. Tap **Copy** on the home screen.
3. Tap **Zoom**.
4. Make the desired settings.
5. Tap **OK**.
6. Tap **Start**.

Annotations for the Zoom settings screen:

- Change zoom manually:** Points to the manual input field showing '100.0%'.
- Automatically reduce/enlarge original size to paper size:** Points to the 'Auto' option.
- Copy in the same size as the original:** Points to the 'x1.0' / '100%' option.
- Preset zoom values (can be changed):** Points to the list of preset zoom values (Reduce and Enlarge).

Duplex Settings

1. Position the original(s).
2. Tap **Copy** on the home screen.
3. Tap **Duplex Settings**.
4. Make the desired settings.
5. Tap **OK**.
6. Tap **Start**.

Annotations for the Duplex Settings screen:

- Select 1-sided or 2-sided scanning > copying:** Points to the 'Original > Copy' dropdown menu.
- Specify the binding position of the original:** Points to the 'Org. Binding Pos.' dropdown menu.
- Specify the binding position for the copies:** Points to the 'Output Bind Dir.' dropdown menu.
- Select orientation of the original loaded into ADF or placed on the original glass:** Points to the 'Original Direction' dropdown menu.



 
Scan to e-mail (Direct input)




1. Position the original(s).
2. Tap **Scan to Email** on the home screen.



3. Tap **+**.



 4. Enter the destination address.
5. Tap **OK**.

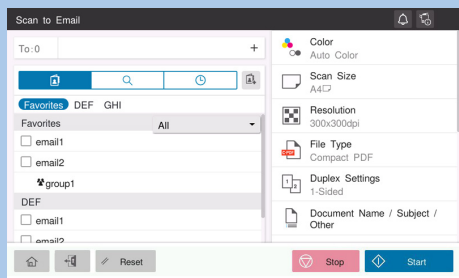


6. Specify settings as needed.
7. Tap **Start**.
The file is sent.


Save file in a shared folder



 1. Position the original(s).
2. Tap **Scan (Folder)** on the home screen.

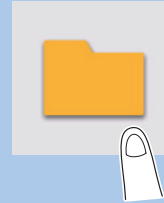


 3. Select the desired folder.

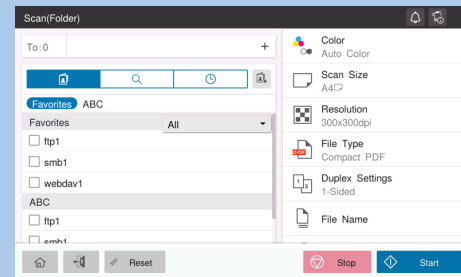

4. Specify settings as needed.
5. Tap **Start**.
The file is saved.

 Scan operations – Settings*

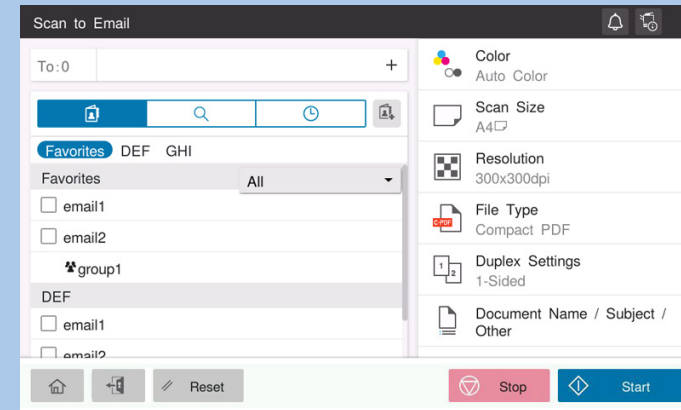


Setting*	Description
Color	Select the scan color mode (Full Color, Black&White)
Scan Size	Specify the original size
Resolution	Specify the scan resolution
File Type	Specify the file type for saving
Duplex Settings	Specify 1-sided or 2-sided scanning
Document Name/ Subject/Other	Change the file name, E-mail subject, or message text.
Separate Scan	Scan a large number of originals in several batches / scan originals using both ADF and original glass
Mixed Original	Scan originals of different sizes
Blank Page Removal	Skip blank pages
Original Direction	Select orientation of the original loaded into ADF or placed on the original glass
Original type	Select the image quality level of the original
Density	Adjust the scan brightness
Background Removal	Adjust the the background brightness (e.g. for originals with colored background)

*Available settings depend on system configuration.

Search for a destination



 
1. Position the original(s).
2. Tap **Scan to Email, Scan to Box or Scan (Folder)**.
3. Select the search tab.
4. Select **Name Search, Address Search or Search Box No.**
5. Enter the search text and tap **Search**.
6. Specify the target destination from the search result.
7. Tap **Start**.
The file is sent.

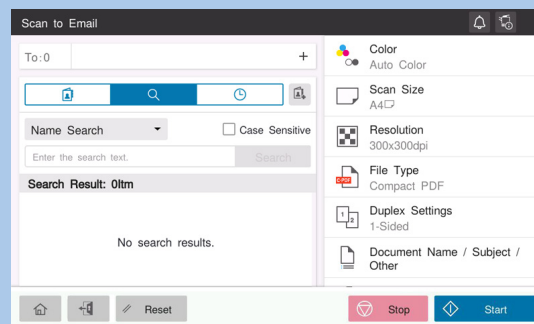

Sending data to multiple destinations / using the address book




 
1. Position the original(s).
2. Tap **Scan to Email, Scan to Box or Scan (Folder)**.
3. Select the destination tab.
4. Specify two or more destinations.
or
Specify a group.
5. Tap **OK**.
6. Tap **Start**.
The file is sent.

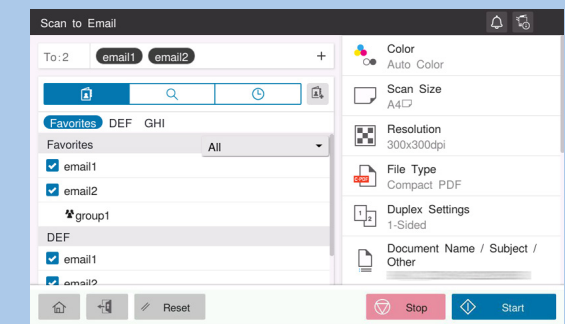





Register a destination (address book)

  1. Tap **Utility** on the home screen.
2. Tap **Utility > Store Address > Address Book**.
3. Tap **New Registration**
4. Select the type of destination you want to register.
5. Enter the destination information and tap **OK**.

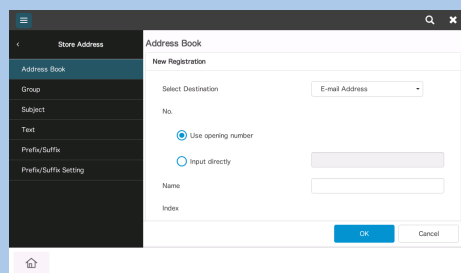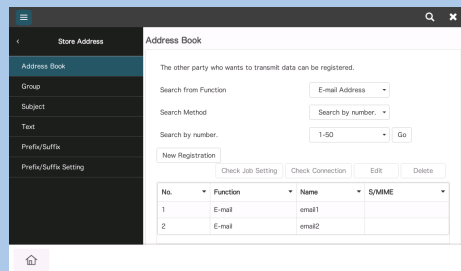



Save file in a user box

  1. Position the original(s).
2. Tap **Scan to Box** on the home screen.
3. Select the desired user box.
4. Specify settings as needed.
5. Tap **Start**.
The file is saved.

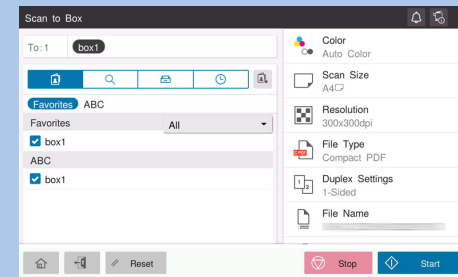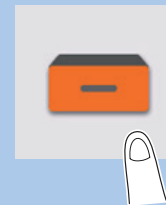


Create a user box

  1. Tap **Utility** on the home screen.
2. Tap **Utility > Box > User Box List**.
3. Tap **New Registration**
4. Enter the destination information and tap **OK**.

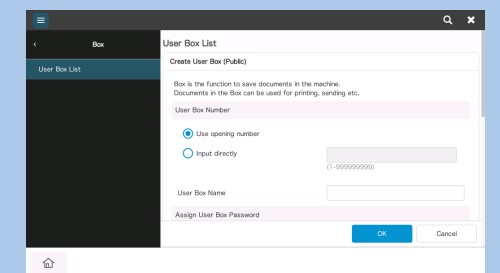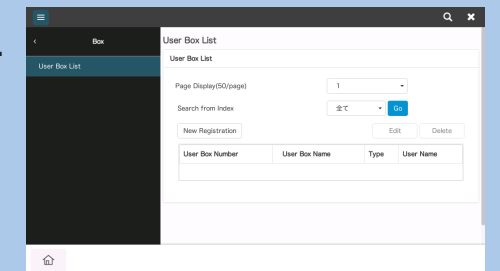


Print from USB memory

 
1. Position the original(s).
2. Plug the USB memory device into the USB port.

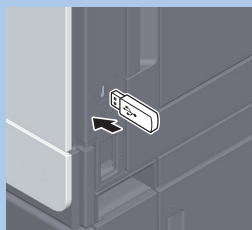

 3. Tap **External Memory Print** on the home screen.
4. Select the desired file.

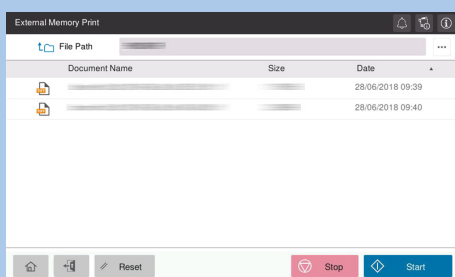

 
5. Specify settings as needed.

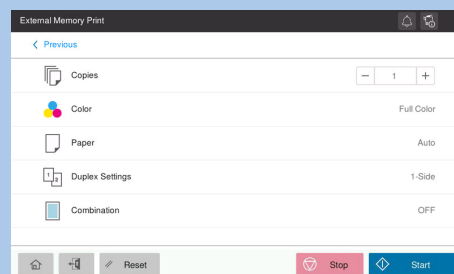

6. Tap **Start**.
The file is printed.

Fax operations - Send a fax (direct input)*

 1. Position the original(s).

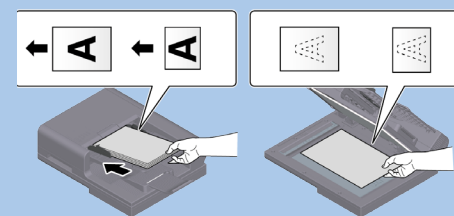


2. Tap **Fax** on the home screen.



3. Tap the direct input tab.

 4. Enter the fax number.

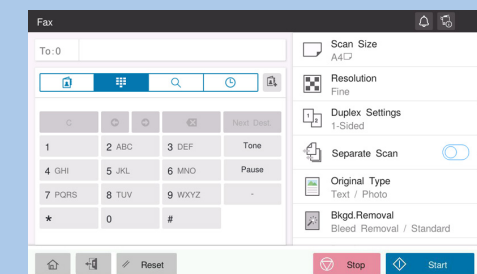

5. Specify settings as needed.
6. Tap **Start**.



The file is sent.

* only with fax option