 


**QUICK REFERENCE**



**How to use the system - Panel**

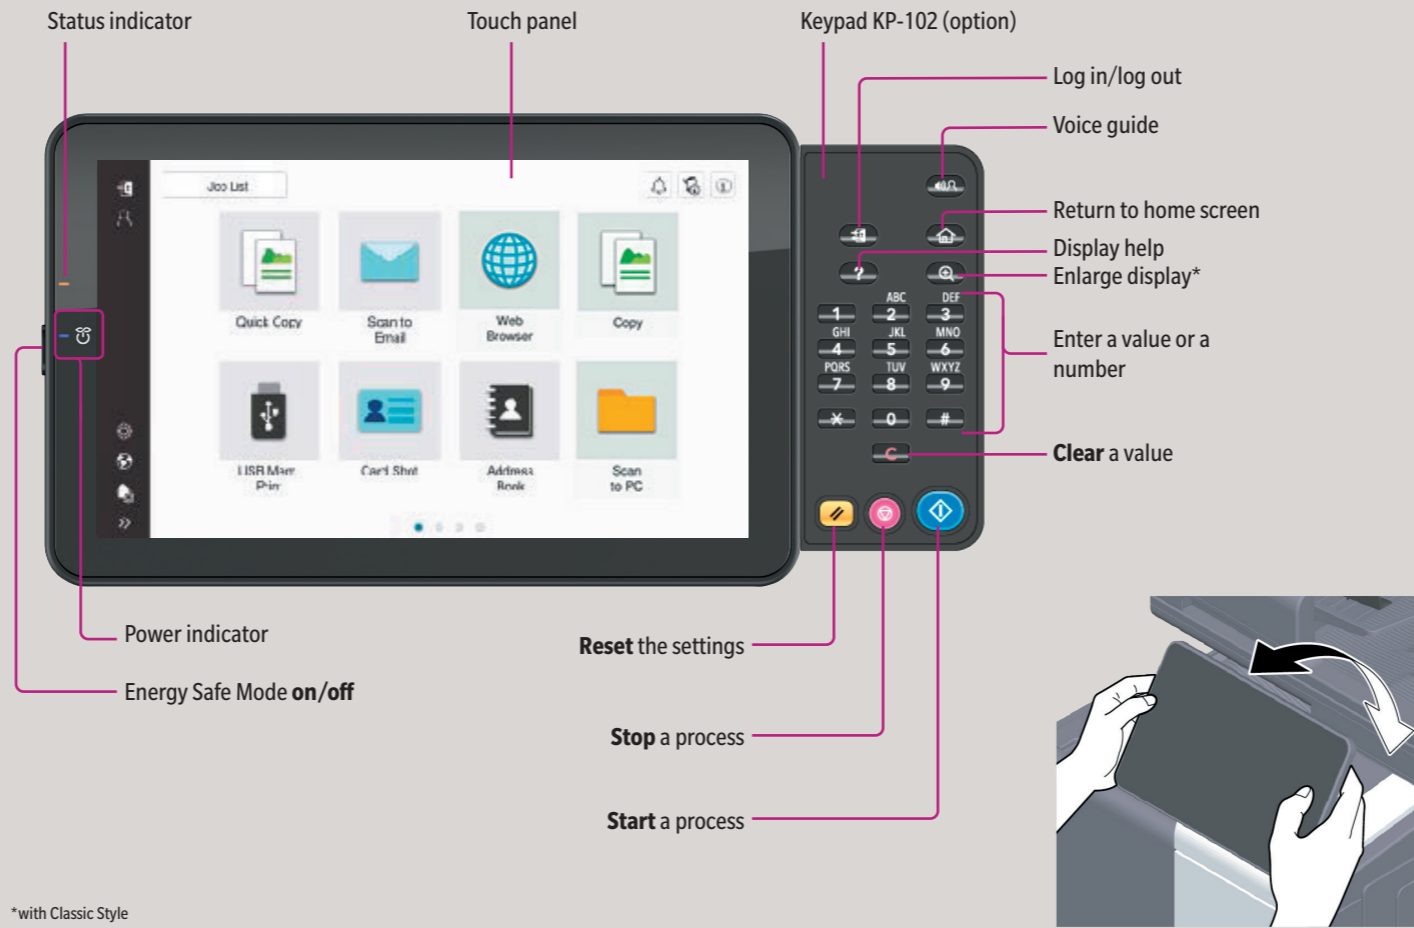

**Operating the touch screen\***

**Screen gestures**

 
1. **Tap** to select or determine a menu




2. **Flick** to scroll a list or a page



3. **Drag** to move a scroll bar or document.

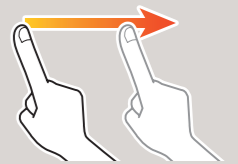


 4. **Pan** to move a displayed image.

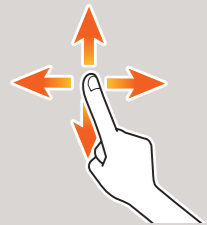


**Displaying the keypad**

 Tap the numerals or the input area to display the keypad.  
(If the system is equipped with the optional hardware keypad KP-102, it can be used instead.)

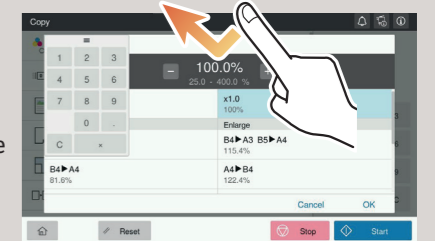


**Moving the keypad**

 Touch the upper side of the keypad and drag it to another display position.

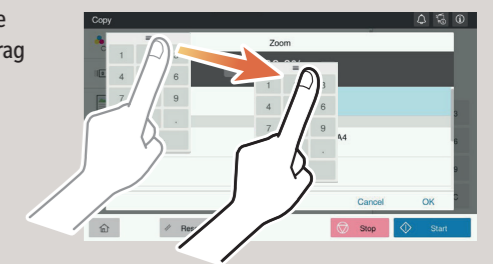

\*Available touch functions vary depending on displayed screen.

**Touch screen - Home**

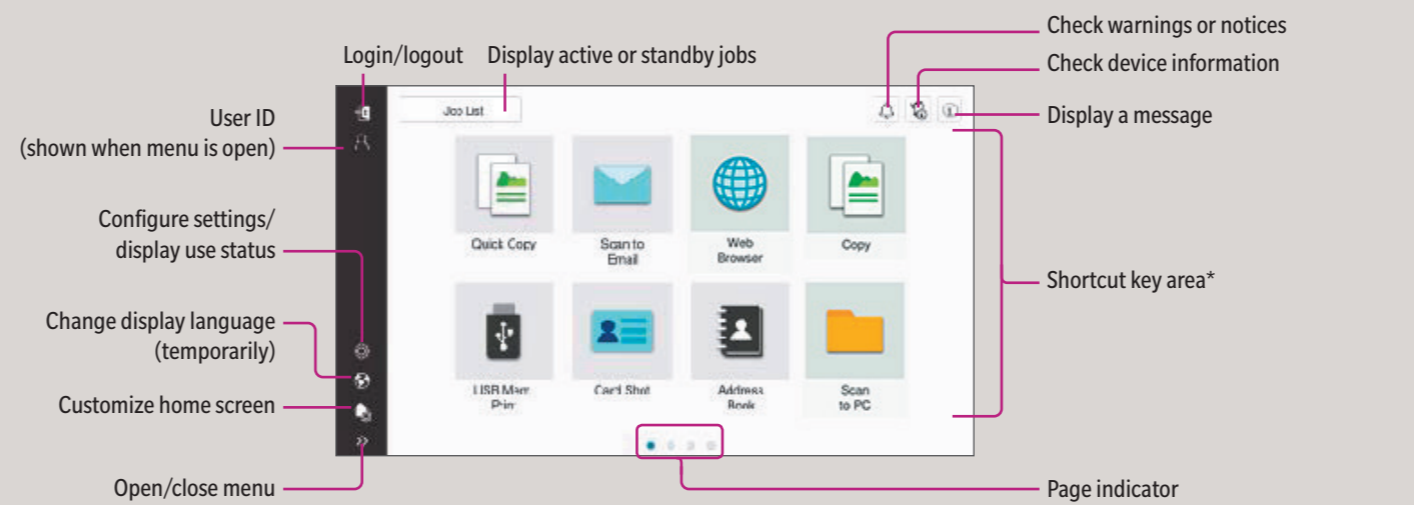 


\*Available shortcut keys depend on machine configuration.




**Basic copy functions - Make a copy**



 
1. Position the original(s).

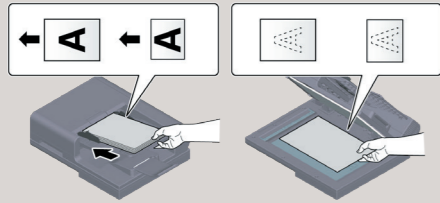

 2. Tap **Copy** or **Quick Copy** on the home screen.

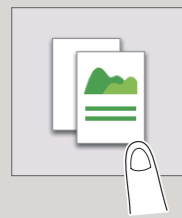

 3. Set copy options as needed.

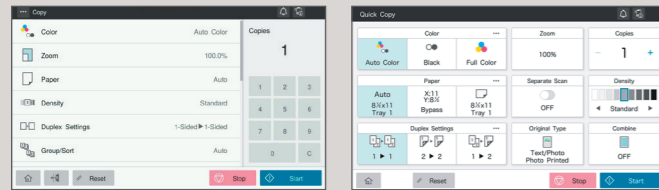

4. Tap **Start**.



**Copy operations - Basic Copy Screen/Quick Copy Screen\***



Annotations for the Copy screen:

- Set current settings as default/ Return settings to factory default
- Scroll bar
- Specify copy settings
- Return to home screen
- Login/logout
- Return settings to default
- Number of copy sets
- Enter number of copy sets
- Start a copy job
- Stop a copy job

Annotations for the Quick Copy screen:

- Select further settings
- Enter number of copy sets
- Specify copy settings

Setting*	Description
<b>Color</b>	Select the copy color mode (e.g. Full Color, Black & White)
<b>Zoom</b>	Specify enlargement or reduction ratio
<b>Paper</b>	Select paper size and type of the original / change size and type of the paper loaded in paper trays
<b>Density</b>	Adjust the brightness of the copy
<b>Duplex Settings</b>	Specify 1-sided or 2-sided scanning / copying
<b>Group/Sort</b>	Feed out copy sets separately by set or page
<b>Separate Scan</b>	Scan a large number of originals in several batches / scan originals using both ADF and original glass
<b>Original Type</b>	Select the image quality level of the original
<b>Combine</b>	Copy multiple pages on a single sheet
<b>Original Direction</b>	Select orientation of the original loaded into ADF or placed on the original glass
<b>Mixed Original</b>	Scan originals of different sizes
<b>Blank Page Removal</b>	Skip blank pages
<b>Original Size</b>	Specify the size of the original when it is not detected correctly

\*Available settings depend on system configuration.

**Zoom**



1. Position the original(s).
2. Tap **Copy** on the home screen.
3. Tap **Zoom**.
4. Tap **More**.
5. Make the desired settings.
6. Tap **OK**.
7. Tap **Start**.

 
Annotations for the Zoom screen:

- Automatically reduce/enlarge original size to paper size
- Change zoom manually
- Copy in the same size as the original
- Preset zoom values



### Duplex Settings


1. Position the original(s).
2. Tap **Copy** on the home screen.
3. Tap **Duplex Settings**.
4. Tap
5. Make the desired settings.
6. Tap **OK**.
7. Tap **Start**.

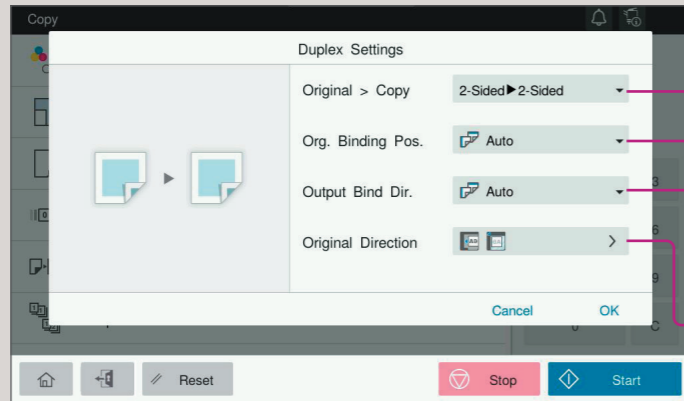

- Select 1-sided or 2-sided scanning > copying
- Specify the binding position of the original
- Specify the binding position for the copies
- Select orientation of the original loaded into ADF or placed on the original glass

### Scan operations - Settings\*

 View scan destinations as buttons or as list

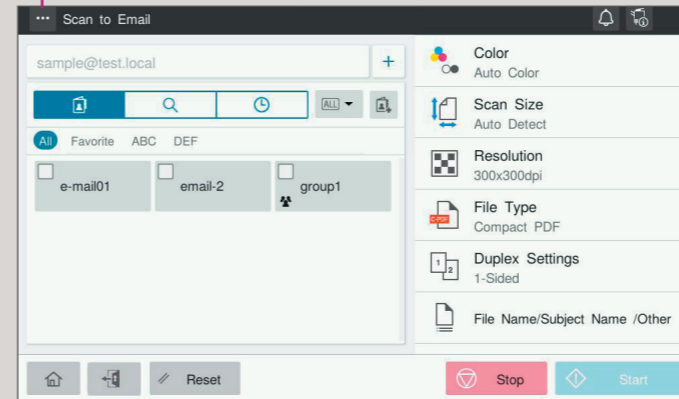


Setting*	Description
<b>Color</b>	Select the scan color mode (Full Color, Black&White)
<b>Scan Size</b>	Specify the original size
<b>Resolution</b>	Specify the scan resolution
<b>File Type</b>	Specify the file type for saving
<b>Duplex Settings</b>	Specify 1-sided or 2-sided scanning
<b>File Name/Subject Name/Other</b>	Change the file name, e-mail subject, or message text.
<b>Separate Scan</b>	Scan a large number of originals in several batches / scan originals using both ADF and original glass
<b>Mixed Original</b>	Scan originals of different sizes
<b>Blank Page Removal</b>	Skip blank pages
<b>Original Direction</b>	Select orientation of the original loaded into ADF or placed on the original glass
<b>Original Type</b>	Select the image quality level of the original
<b>Density</b>	Adjust the scan brightness
<b>Background Removal</b>	Adjust the the background brightness (e.g. for originals with colored background)


\*Available settings depend on system configuration.

### Scan to e-mail (Direct input)

 1. Position the original(s).
2. Tap **Scan to Email** on the home screen.

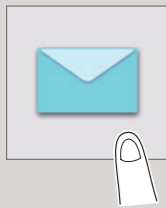

 
3. Tap **+**.
4. Enter the destination address.
5. Tap **OK**.
6. Specify settings as needed.

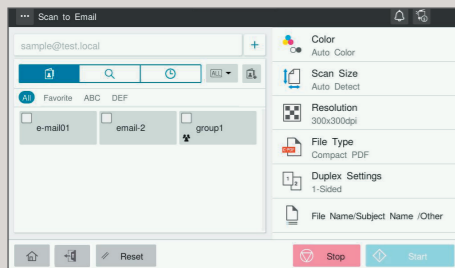


7. Tap **Start**.  
The file is sent.

### Save file on a PC

 1. Position the original(s).
2. Tap **Scan to PC** on the home screen.

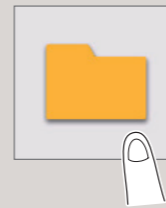

 
3. Select the desired destination.

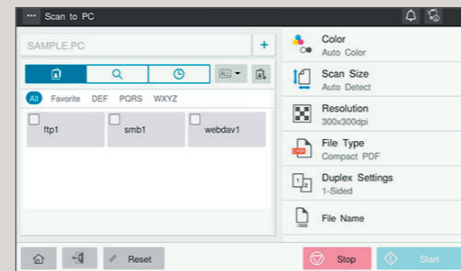

4. Specify settings as needed.
5. Tap **Start**.  
The file is saved.

### Sending data to multiple destinations / using the address book

 1. Position the original(s).
2. Tap **Scan to Email**, **Scan to Box** or **Scan to PC**.
3. Select the destination tab.
4. Specify two or more destinations.  
or  
Specify a group.
5. Tap **OK**.
6. Tap **Start**.  
The file is sent.

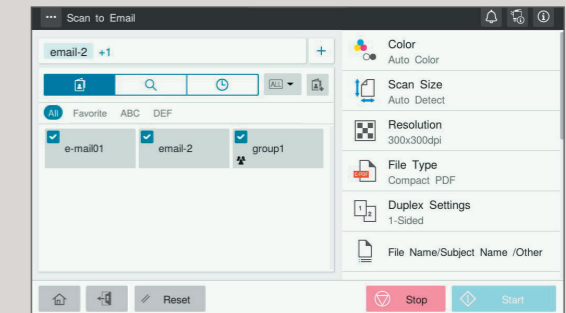




KONICA MINOLTA

**bizhub C4051i/C3351i**
 
### Search for a destination (address book)



1. Position the original(s).
2. Tap **Scan to Email**, **Scan to Box** or **Scan to PC**.
3. Select the search tab.
4. Select **Name Search**, **Address Search** or **Search Box No.**

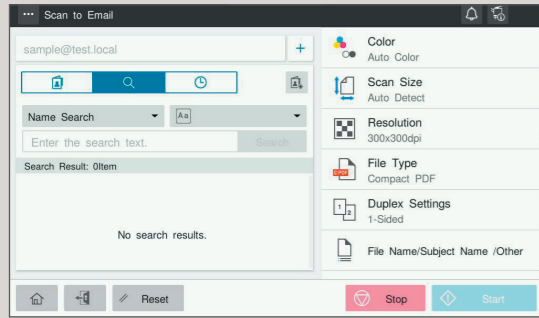


5. Enter the search text and tap **Search**.
6. Specify the target destination from the search result.
7. Tap **Start**.  
The file is sent.

### Register a destination (address book)



 1. Tap **Utility** on the home screen.
2. Tap **Utility > Store Address > Address Book**.
3. Tap **New Registration**
4. Select the type of destination you want to register.

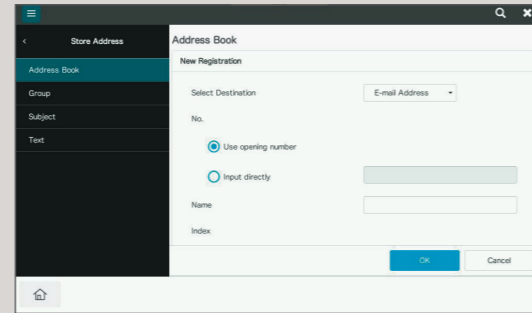


5. Enter the destination information and tap **OK**.

### Save file in a user box



 1. Position the original(s).
2. Tap **Scan to Box** on the home screen.
3. Select the desired user box.

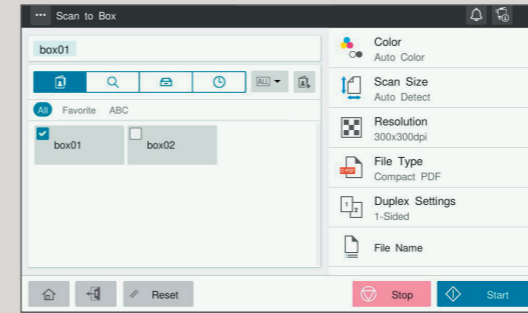


4. Specify settings as needed.
5. Tap **Start**.  
The file is saved.

### Create a user box



 1. Tap **Utility** on the home screen.
2. Tap **Utility > Box > User Box List**.
3. Tap **New Registration**
4. Enter the destination information and tap **OK**.

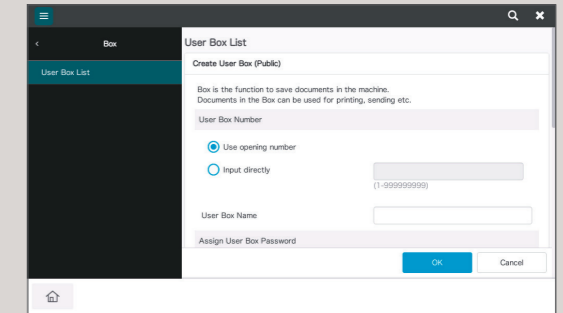


### Print from USB memory




1. Position the original(s).
2. Plug the USB memory device into the USB port.



 3. Tap **USB Mem. Print** on the home screen.
4. Select the desired file.

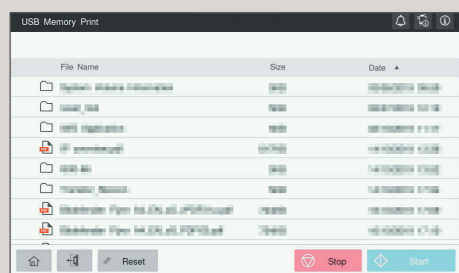

 5. Specify settings as needed.

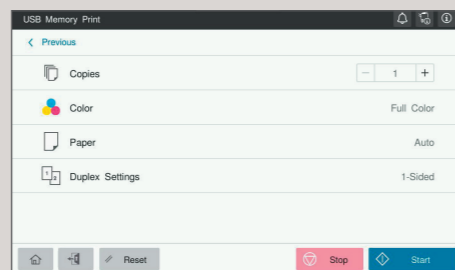


6. Tap **Start**.  
The file is printed.

### Fax operations - Send a fax (direct input)\*



 1. Position the original(s).

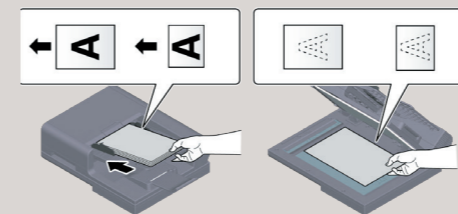


2. Tap **Fax** on the home screen.



3. Tap the direct input tab.

 4. Enter the fax number.

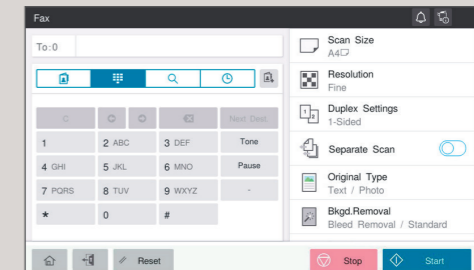

5. Tap **OK**.
6. Specify settings as needed.
7. Tap **Start**.



The file is sent.

\* only with fax option